


(sample photo)

Mount the metal brackets to the double DIN head unit.

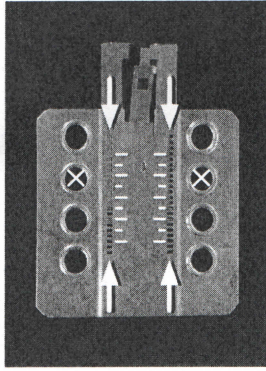

(sample photo)

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)

1. Prepare the Double DIN head unit.

2. Remove the OEM head unit

3. Place Metal Frame into the dashboard.

Connect all required circuit points and push the double DIN head unit in the metal frame until it snaps in.

Place the trim frame.

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidental or indirect damages.